

## DISABLING THE LOW INK WARNING

Instruction provided by **InkTec Co. LTD**, presented by: <http://cartridgeshop.com.au>


For the HP 56 (c6656a), HP 27 (c8727a), HP 57 (c6657a), HP 28 (c8728a), HP 58 (c6658a), HP 59 (c9359a) ink cartridges

If the low ink-warning message appears after inserting a refilled cartridge, please follow the steps below to disable. If your printer has stopped and the LED monitor is blinking, please refer to the section on 'How to Clean the Cartridge's Circuit Board'.

### Step 1

Place a piece of tape\* over the first contact point on the cartridge's circuit board. Take care to only cover the first contact point.

\* We recommend using 3M's brand of semitransparent tapes because it can be removed easily without damaging the cartridge. Adhesive tape that is too strong may cause irreparable damage to the cartridge.

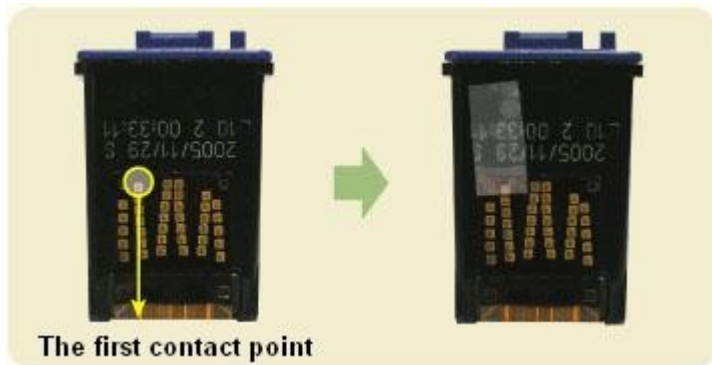

### Step 2

Place the cartridge gently into the printer. After inserting the cartridge, some printers may print a test page while others may show an error message




### Step 3

Remove the cartridge from the printer.

### Step 4

Place a piece of tape over the second contact point on the cartridge's circuit board. Do not

remove the first piece of tape.

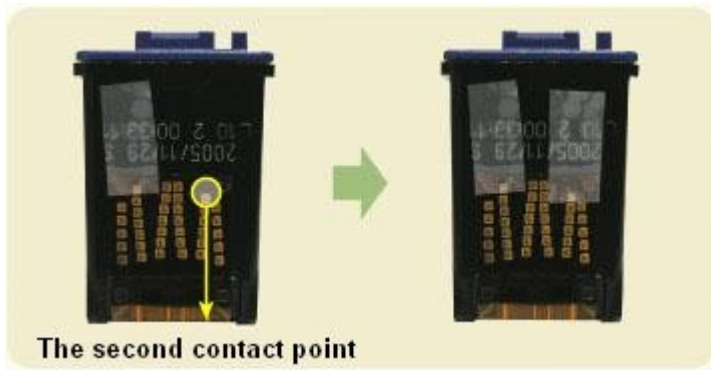

#### Step 5

Place the cartridge gently into the printer. After inserting the cartridge, some printers may print a test page while others may show an error message



#### Step 6

Remove the cartridge from the printer again.

#### Step 7

Remove both pieces of tape that have been placed over the contact points on the circuit board.

#### Step 8

After removing the tape from the circuit board; insert the cartridge into the printer again. Print a test page if one has not automatically printed



#### Step 9

After the test page has printed; you should find that the ink level has returned to full.

